


Delco EST Ignition Wiring Diagram

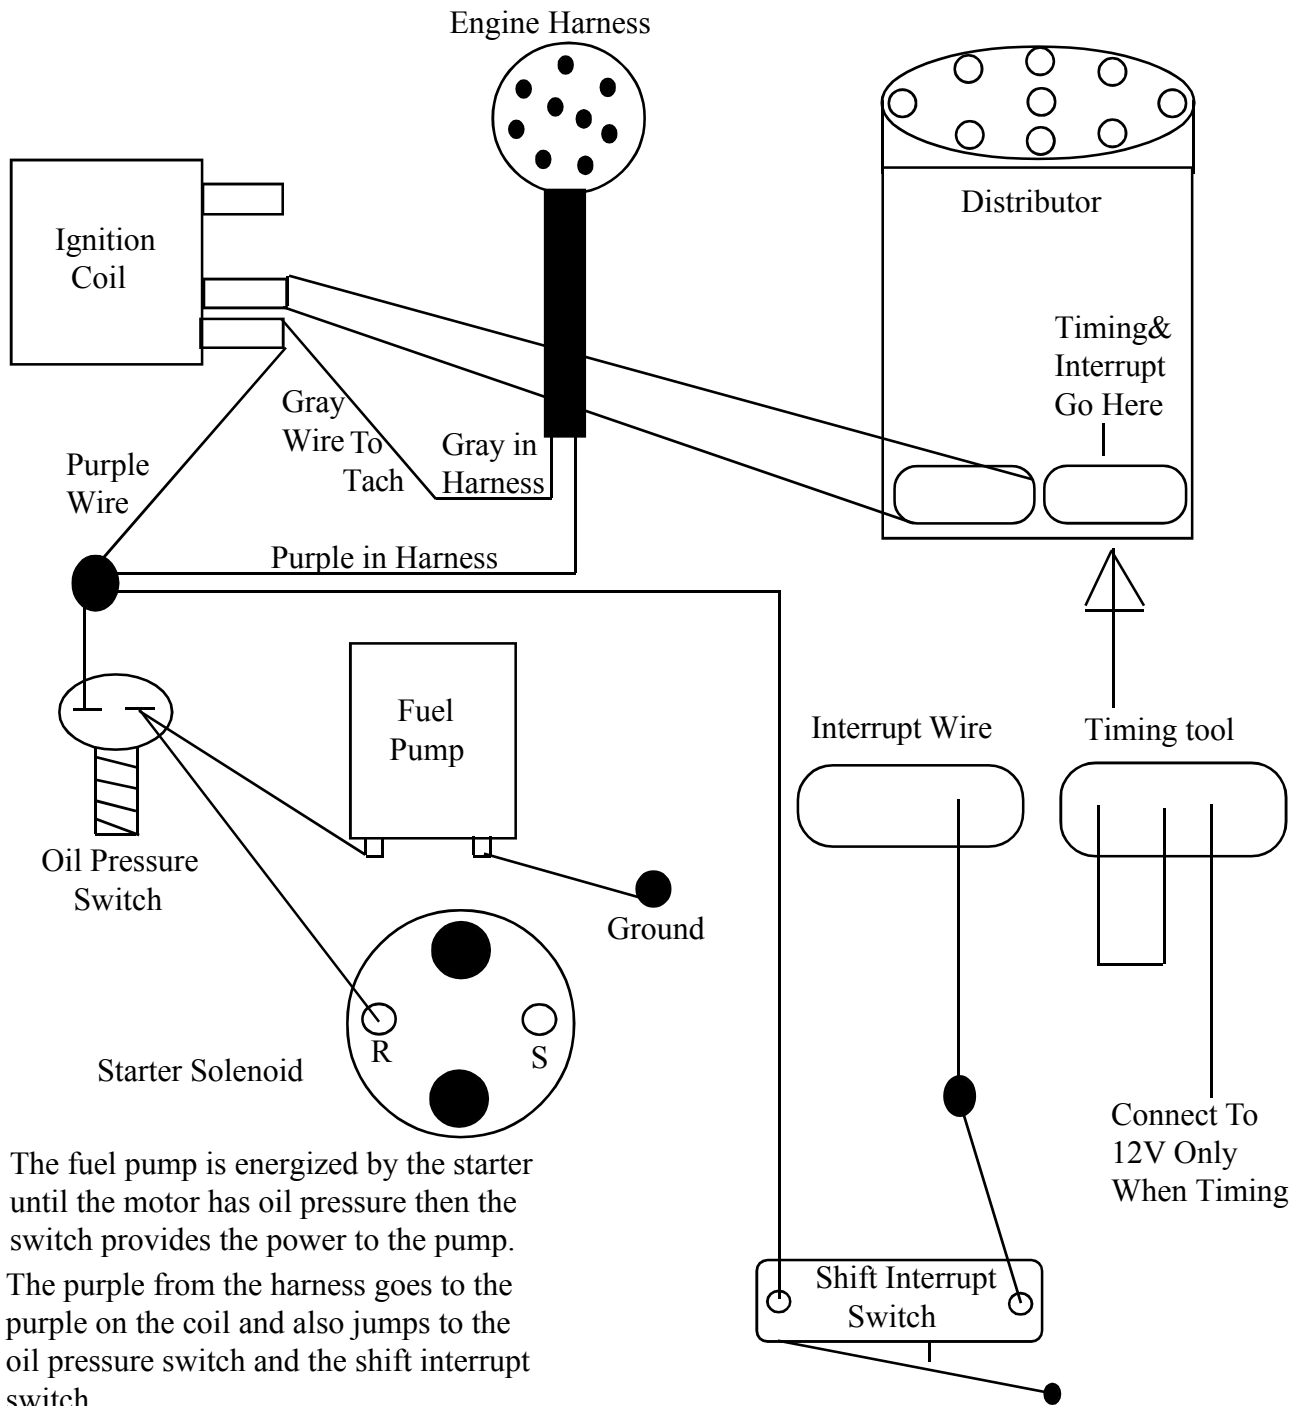

The fuel pump is energized by the starter until the motor has oil pressure then the switch provides the power to the pump. The purple from the harness goes to the purple on the coil and also jumps to the oil pressure switch and the shift interrupt switch.

The gray wire in the harness goes to gray coming off of the coil.

Only For Mercruiser I/O

This is only a guide, you as the installer are responsible for ascertaining the proper hookup for your application. This will give you the theory of operation, and is to be used only as a guide.